




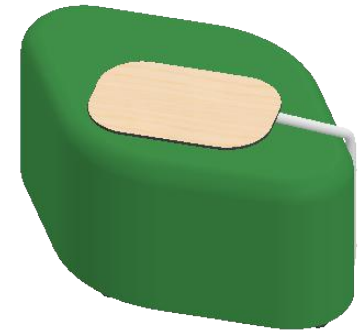
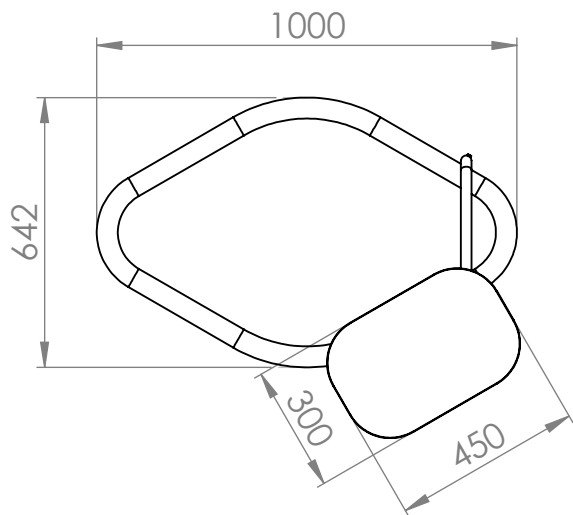
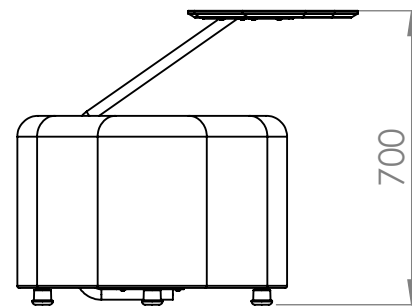
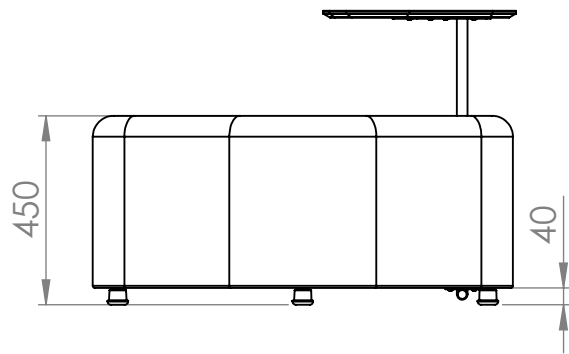


REVISIONS			
REV.	DESCRIPTION	DATE	BY

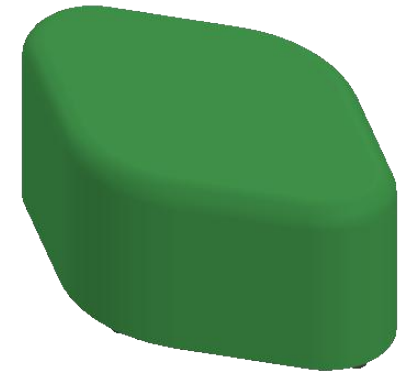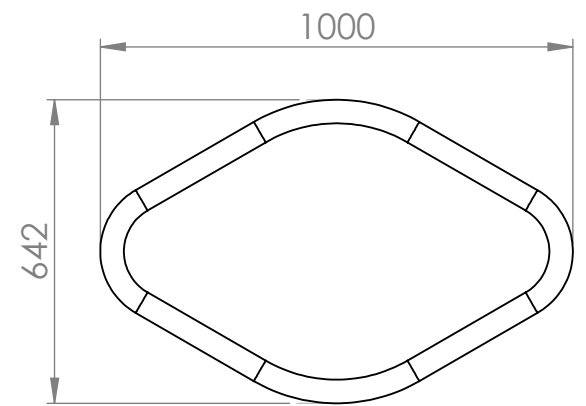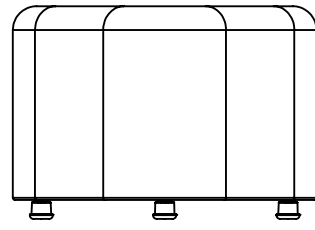


 GÖTESSONS			
Art.nr. 647160		Name RomboSeat	
Last saved by Jonathan	Last saved 2021-10-29	Material	Rev
Created by Jonathan	Created date 2021-10-29		Format A4
		Scale 1:16	Page 1/1





REVISIONS			
REV.	DESCRIPTION	DATE	BY

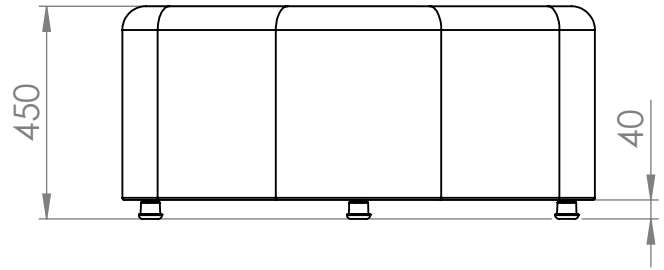

RomboTable is bought separately.

 GÖTESSONS	
Art.nr. 647161	Name RomboSeat for RomboTable
Last saved by Jonathan	Last saved 2021-10-29
Created by Jonathan	Created date 2021-10-27
Material	Rev
Scale 1:18	Page 1/1
Format A4	

REVISIONS			
REV.	DESCRIPTION	DATE	BY

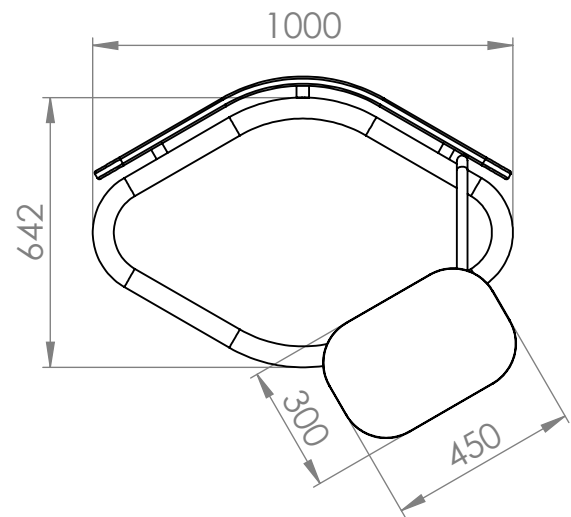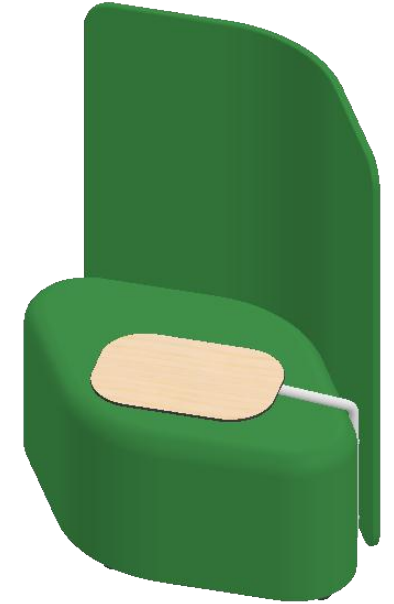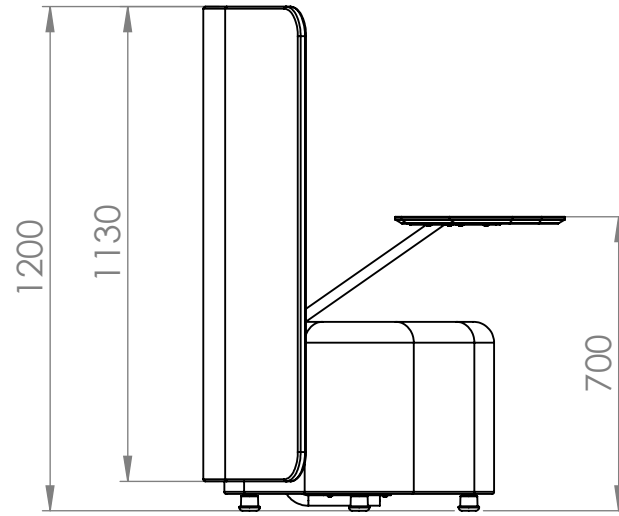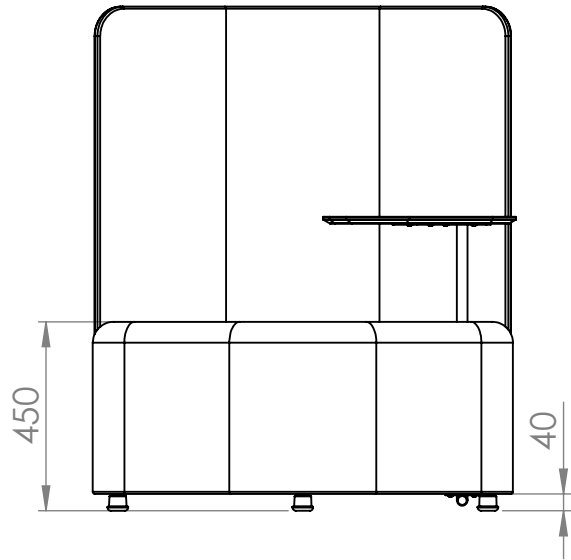




RomboScreen & RomboTable is bought separately.




Art.nr. 647162		Name RomboSeat for RomboTable & RomboScreen		
Last saved by Jonathan	Last saved 2021-10-29	Material	Rev	Format A4
Created by Jonathan	Created date 2021-10-27		Scale 1:18	Page 1/1

These measurements refer to the frame work and do not include upholstery, seam or zip

Tolerances (mm)			
Dimension			Deviation
(1)	-	20	±0,2
(20)	-	50	±0,5
(50)	-	200	±1,0
(200)	-		±2,0

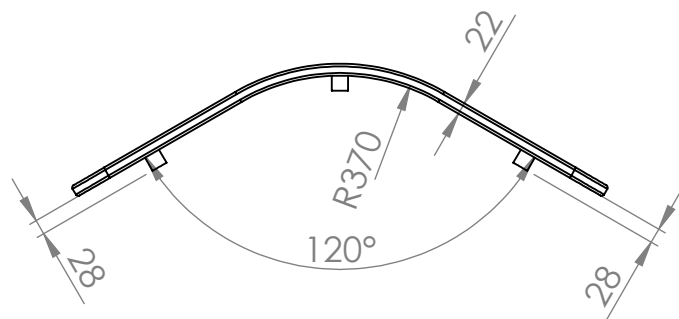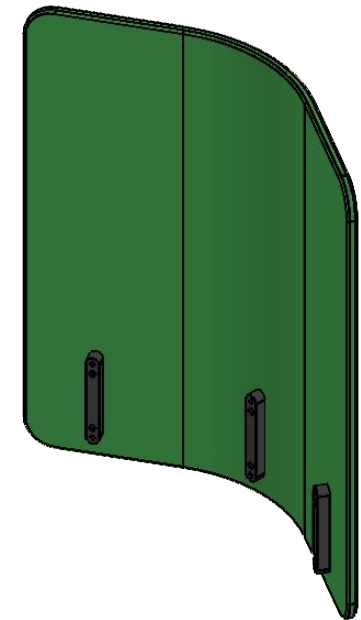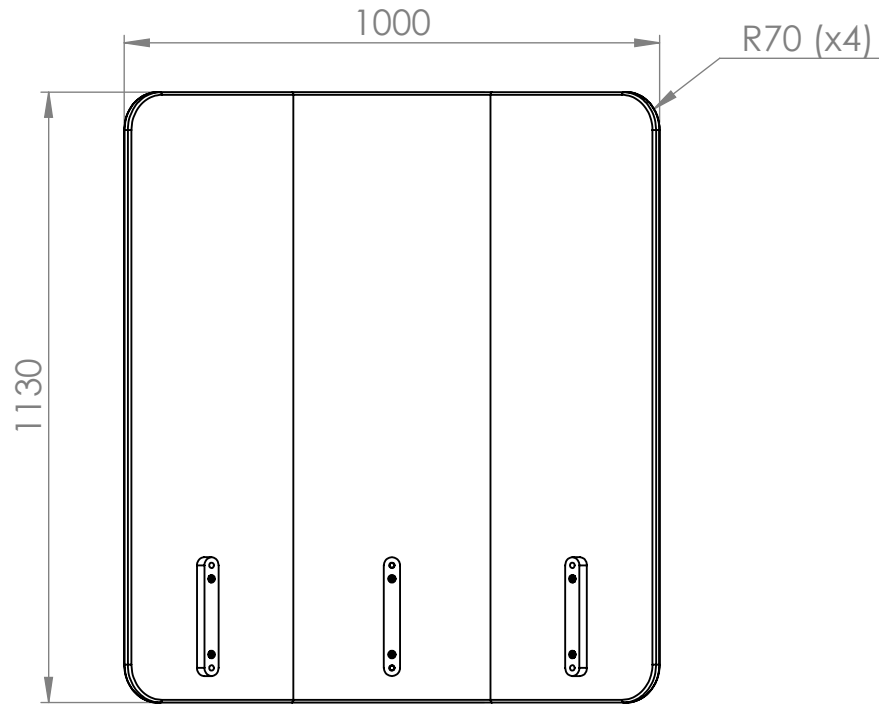

Section view of RomboScreen

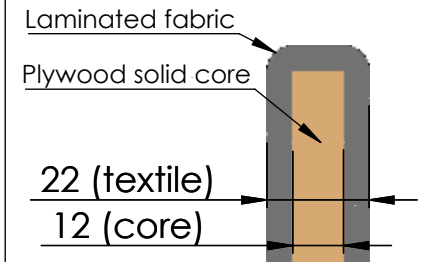


Art.nr. 647163		Name RomboScreen		
Last saved by Jonathan	Last saved 2021-10-29	Material	Rev -	Format A4
Created by Jonathan	Created date 2021-10-22		Scale 1:14	Page 1/1



GÖTESSONS


S

GB

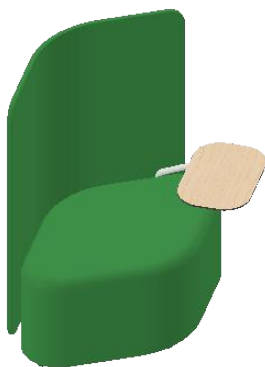


**Monteringsanvisning
RomboSeat**

**Mounting instruction
RomboSeat**

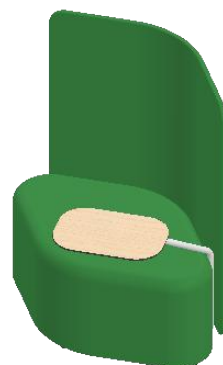

Innehåll RomboSeat

Content RomboSeat

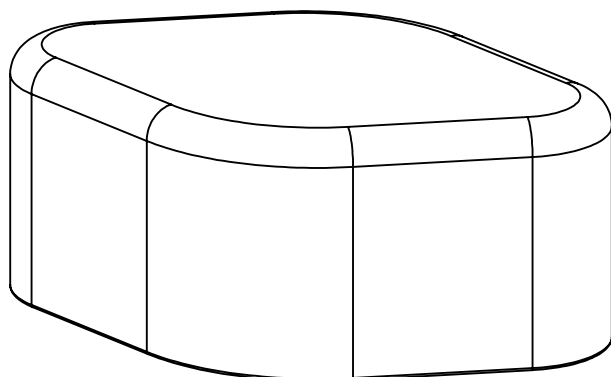


x1




x4

Monteringsanvisning RomboSeat





Mounting instruction RomboSeat

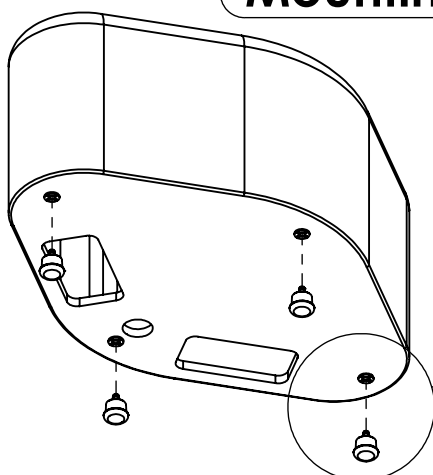

x4

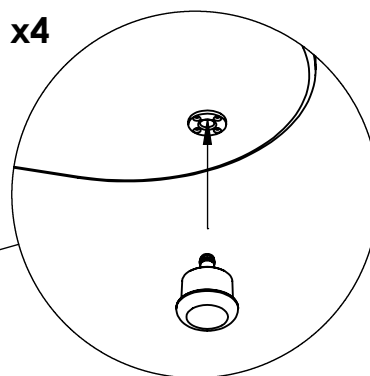


Innehåll RomboScreen Content RomboScreen

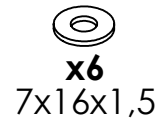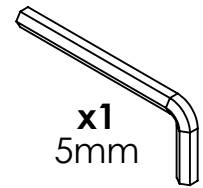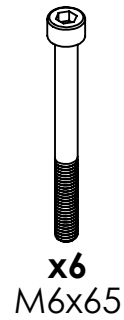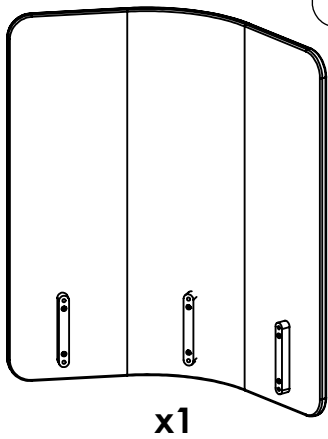


Monteringsanvisning RomboScreen Mounting instruction RomboScreen

Undersida Bottom view

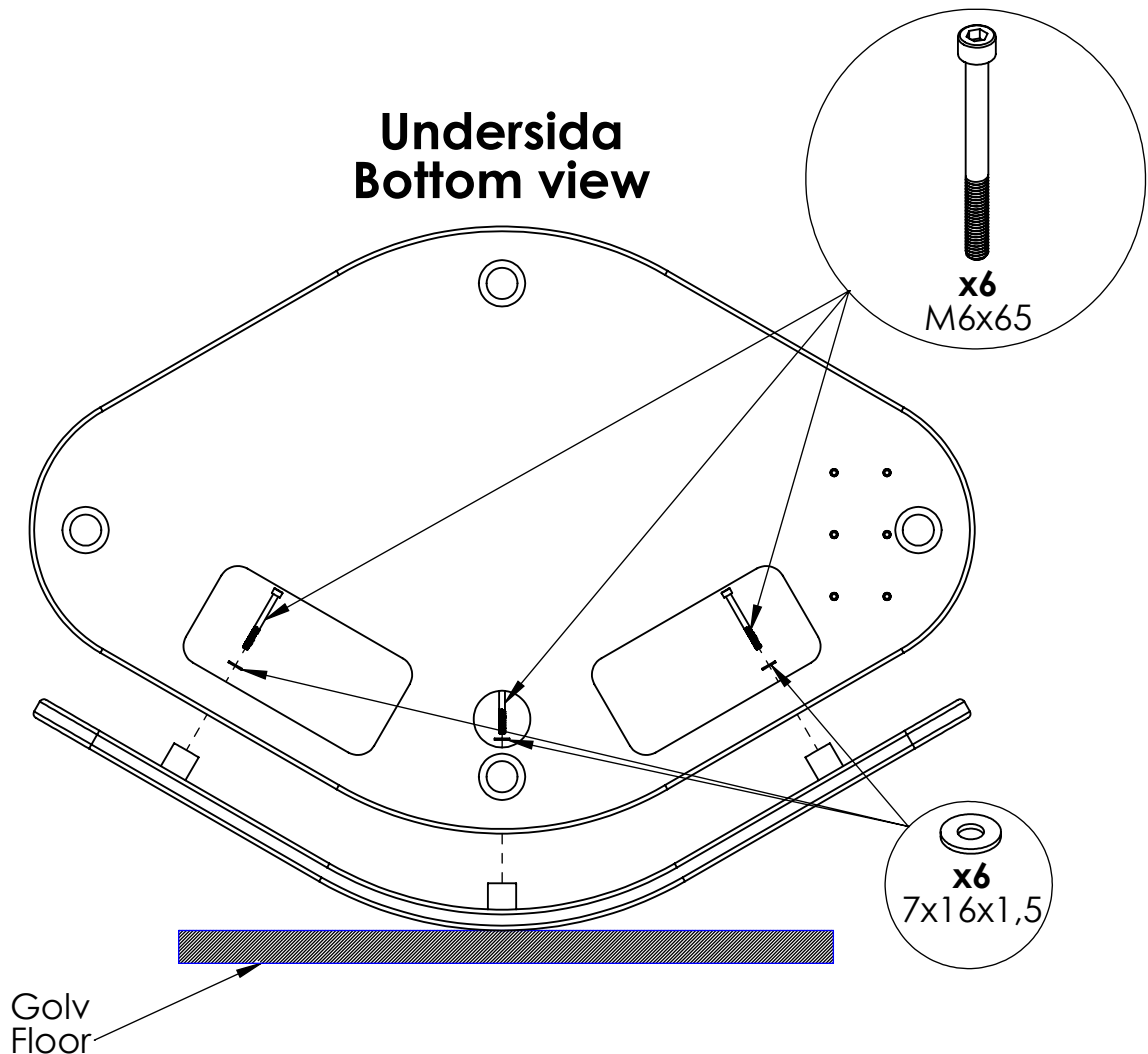


Lägg RomboScreen på golvet innan montering börjar.
Montera RomboScreen på RomboSeat genom att skruva fast den inifrån RomboSeat. Montera alla skruvarna innan du drar åt dem.
Start with putting the RomboScreen on the floor.
Fix RomboScreen to RomboSeat with screws from the inside of the RomboSeat.
Mount all the screws before tightening.


Innehåll RomboTable
Content RomboTable

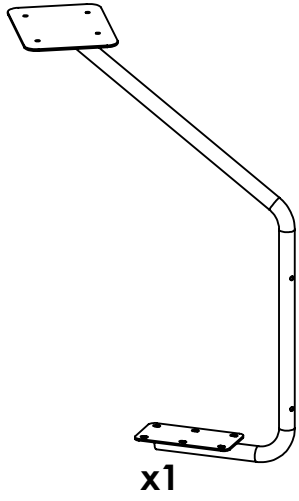


x1

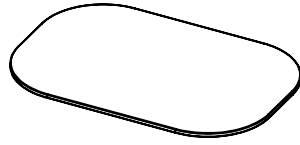

x1

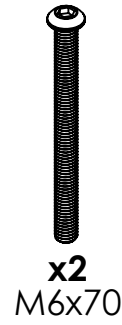

x2
M6x70

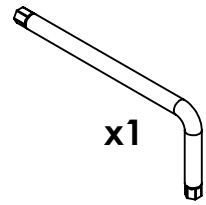

x1





x6
M6x25



x4
M6x14

1


Monteringsanvisning RomboTable
Mounting instruction RomboTable

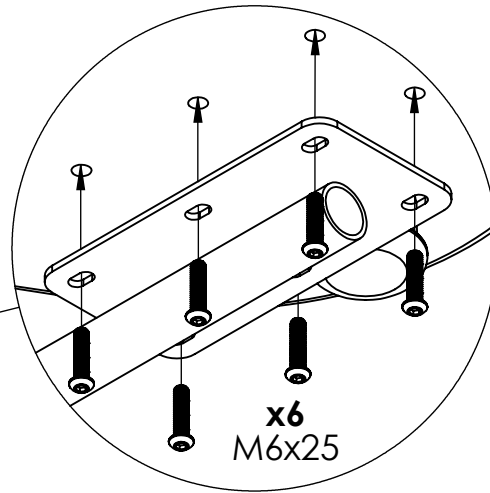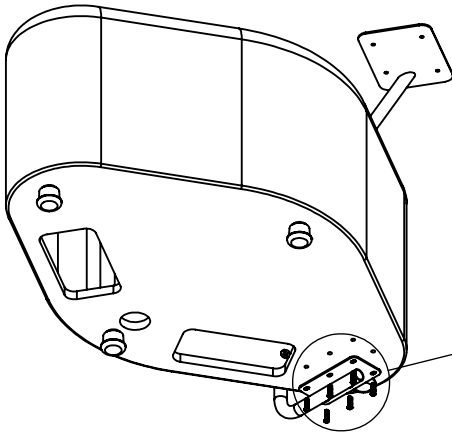

x6
M6x25

Drag ej åt skruvarna.
 Do not tighten the screws.


2

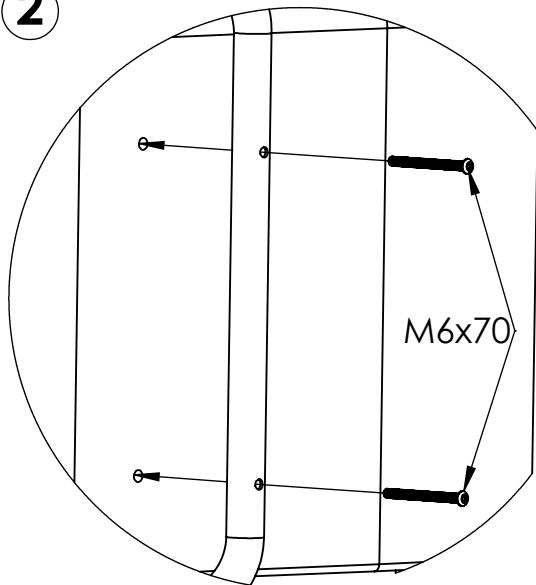


M6x70

Efter detta steg, drag åt alla skruvar.
 After this step, tighten all screws.

3

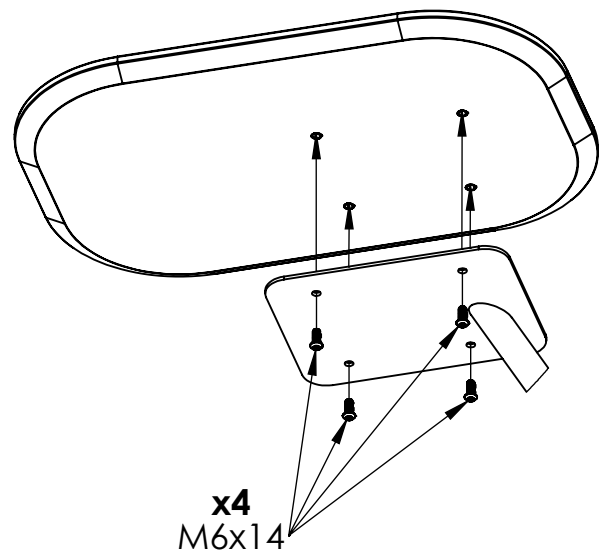

x4
M6x14

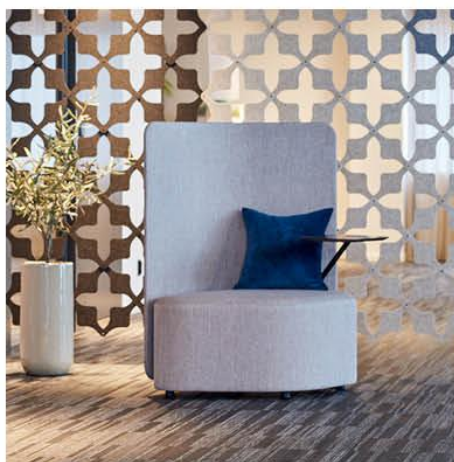

ROMBOSEAT

A stylish seating furniture that makes it easy to decorate thanks to its unique shape. The seating furniture can be ordered: freestanding, with table, screen or with both table and screen. Designed by Henrik Kjellberg and Jon Lindström from o4i Design Studio.

PRESCRIBED TEXT

RomboSeat

Rhombus-shaped seating with foam laminated fabric

Optional: with table, with screen, with table + screen

Optional: electrical outlet in the seat

Stand table: black metal, white metal

Laminate: ash, oak, walnut, black, white

Textile:

Measure: W 1000 H 450 D 650 Seat height: 450

Table: RomboTable

Screen: RomboScreen

ARTICLES

ART. NO	SIZE / DESCRIPTION	W:	H:	D:
647160-	RomboSeat free seating	1000	450	650
647161-	RomboSeat to RomboTable	1000	450	650
647162-	RomboSeat to RomboTable & RomboScreen	1000	450	650
647163-	RomboScreen	1000	1130	250